



IR Code Map

Phoenix

Full IR Code Map

#	TYPICAL VCR/TV CODES	#	CD-I CODES	#	OPTIONAL CODES
1	Play	43	CDI Single Dot	80	Numbase/Favorite
2	Stop	44	CDI Double Dot		
3	Pause	45	Up Fast	81	Clock/Counter Display
4	Fast Forward / Skip Fwd	46	Up Medium Fast		
5	Rewind / Skip Reverse	47	Up Medium Slow	82	Audio channel (LD)
6	Search Fwd	48	Up Slow	83	Digital/ Analog audio (LD)
7	Search Rev	49	Down Fast		
8	Record	50	Down Medium Fast	84	Reset Counter
9	Power On/Off	51	Down Medium Slow		
		52	Down Slow	85	Clear
10	0	53	Left Fast		
11	1	54	Left Medium Fast	86	Chapter/Frame
12	2	55	Left Medium Slow		
13	3	56	Left Slow	87	Step Fwd (Still Fwd)
14	4	57	Right Fast	88	Step Rev (Still Rev)
15	5	58	Right Medium Fast		
16	6	59	Right Medium Slow	89	Closed Caption
17	7	60	Right Slow		
18	8	61	Up Left Fast	90	Tracking Down
19	9	62	Up Left Medium Fast	91	Tracking Up
		63	Up Left Medium Slow		
21	Enter	64	Up Left Slow	92	Side A (LD)
		65	Up Right Fast	93	Side B (LD)
22	Channel Up	66	Up Right Medium Fast		
23	Channel Down	67	Up Right Medium Slow	94	VCR Power On (TM only)
		68	Up Right Slow	95	VCR Power Off (TM only)
24	Volume Up	69	Down Left Fast		
25	Volume Down	70	Down Left Medium Fast	96	TV/Video/Input Up
26	Mute	71	Down Left Medium Slow	97	TV/Video/Input Dwn
		72	Down Left Slow		
27	Power On	73	Down Right Fast	98	SAP
28	Power Off	74	Down Right Medium Fast		
		75	Down Right Medium Slow		
31	Line 1	76	Down Right Slow		
32	Line 2				
33	Line 3				
34	RGB 1				
35	RGB 2				
36	RGB 3				

**DVD Code Chart**

#	TRANSPORT	#	TUNING	#	OPTIONAL CODES
1	Play	10	0	29	Select VCR (Combo Unit)
2	Stop	11	1	30	Select DVD (Combo Unit)
3	Pause	12	2		
4	Next Chapter (Skip Fwd)	13	3	44	Menu
5	Previous Chapter (Skip Rev)	14	4	45	Navigate Up
6	Search Fwd	15	5	46	Navigate Down
7	Search Rev	16	6	47	Navigate Left
8	Record	17	7	48	Navigate Right
9	Power On/Off	18	8	49	Select / Center / Enter
		19	9		
		21	Enter	81	Toggle Display

VCR Code Chart

#	TRANSPORT	#	TUNING	#	OPTIONAL CODES
1	Play	10	0	81	Clock/Counter Display
2	Stop	11	1	84	Reset Counter
3	Pause	12	2	85	Clear
4	Fast Forward	13	3	87	Step Fwd (Still Fwd)
5	Rewind	14	4	88	Step Rev (Still Rev)
6	Search Fwd	15	5	90	Tracking Down
7	Search Rev	16	6	91	Tracking Up
8	Record	17	7	96	VCR Power On (TM only)
9	Power On/Off	18	8	97	VCR Power Off (TM only)
		19	9		
		21	Enter		

TV/Tuner Code Chart

#	CHANNELS	#	CONTROL	#	OPTIONAL CODES
9	Power On/Off	24	Volume Up	89	Closed Caption
10	0	25	Volume Down		
11	1	26	Mute	96	TV/Video/Input Up
12	2			97	TV/Video/Input Dwn
13	3	27	Power On		
14	4	28	Power Off	98	SAP
15	5				
16	6	31	Line 1		
17	7	32	Line 2		
18	8	33	Line 3		
19	9	34	RGB 1		
		35	RGB 2		
21	Enter	36	RGB 3		



IR Laser Disc Code Chart

#	TRANSPORT	#	CHAPTER/FRAME	#	OPTIONAL CODES
1	Play	10	0	81	Clock/Counter Display
2	Stop	11	1		
3	Pause	12	2	83	Audio channel (LD)
4	Fast Forward	13	3	85	Digital/Analog audio (LD)
5	Rewind	14	4	85	Clear
6	Search Fwd	15	5	86	Chapter/Frame
7	Search Rev	16	6		
8	Record	17	7	87	Step Fwd (Still Fwd)
9	Power On/Off	18	8	88	Step Rev (Still Rev)
		19	9		
		21	Enter	92	Side A (LD)
				93	Side B (LD)

Still Video Code Chart

#	TRANSPORT	#	CHAPTER/FRAME	#	OPTIONAL CODES
1	Play	10	0	87	Step Fwd (Still Fwd)
2	Stop	11	1	88	Step Rev (Still Rev)
3	Pause	12	2		
9	Power On/Off	13	3		
		14	4		
		15	5		
		16	6		
		17	7		
		18	8		
		19	9		
		21	Enter		

Satellite Code Chart

#	CHANNELS	#	CONTROL	#	OPTIONAL CODES
10	0			80	Favorite Channel
11	1				
12	2				
13	3				
14	4				
15	5				
16	6				
17	7				
18	8				
19	9				
21	Enter				